


# Installation Instructions for Wireless Circuit Board WITHOUT Amber Strobes - Toggle Switch

1. Turn off power on the light bar.
2. Disconnect one of the leads from the battery.
3. Cut off the existing circuit board or circuit board plug from the light bar.
4. Strip approximately 3/8" from each wire.
5. Connect the red wire from the new circuit board labeled PWR/+ to the wire lead coming from the toggle switch.
6. All other wire connections will be shown as circuit board/light bar: black/black, red/red, pink/green, yellow/yellow, white/brown.
7. Using a heat gun or hair dryer, heat the shrink tube connections, being careful not to melt any of the wires.
8. Reconnect the battery.
9. Turn on power.
10. Test the light bar.

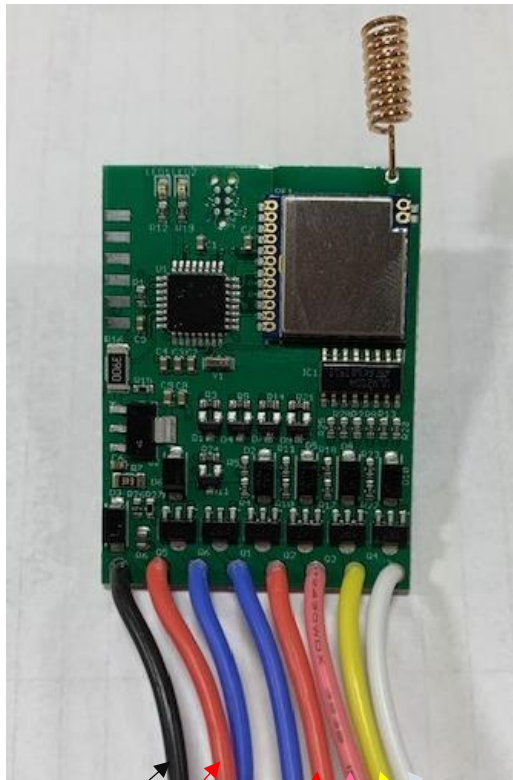

Black (-) Red + Blue (not used) Red Pink Yellow White